


MAPIR Camera Survey 2 Instructions

M.H. Trauth, 16 Juli 2019

- There are three buttons on the camera:

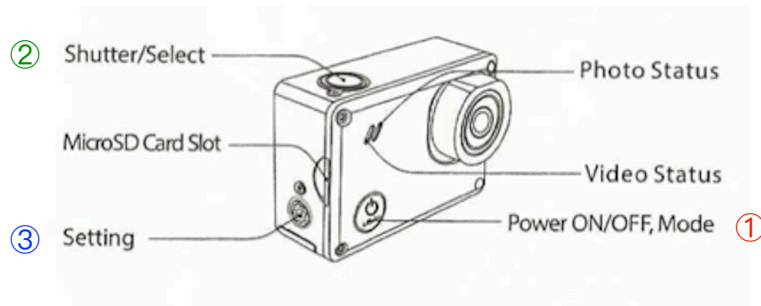

- ① Button "Power ON/OFF, Mode": Turns the camera on/off and navigates through the menu
 - ② Button "Shutter/Select": Triggers the image capture and selects menu items
 - ③ Button "Setting": Enters/exits the menu
1. Turning on the camera. Hold ① until the display turns on. Pressing ① multiple times changes the mode. Navigate from the image display through the different capture modes to the "System Settings" (gear icon), then select it using ②. Navigate with ① to the menu item "Beep" and turn off the beeping using ②.
 2. Formatting the SD card. Navigate with ① to the menu item "Format", select it with ②, move to "OK" using ① when asked "All data will be deleted", and confirm with ②.
 3. Setting image parameters. Press ③ to exit the menu and return to the image display. Pressing ③ again takes you to the image settings menu. Use ① to navigate to the submenus and apply the following settings:
 1. RAW -> On
 2. Shutter Speed -> Auto
 3. Time-lapse -> Off
 4. Self-timer -> Off
 5. ISO -> Auto
 4. Ready to capture images. Press ③ again to return to the image display and begin capturing images.