


MAPIR Camera Survey 3 Instructions

M.H. Trauth, 22 Juli 2025

- The camera has two buttons and a touchscreen:

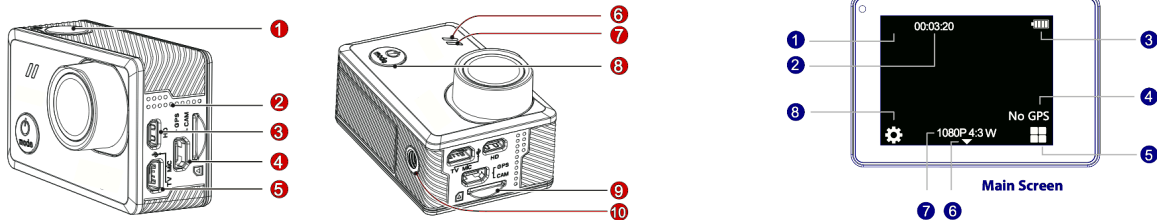

- **8** Button "Power ON/OFF, Mode": Turns the camera on/off and navigates through the menu
- **1** Button "Shutter/Select": Triggers image capture and selects menu items
- **8** Menu for general camera settings
- **5** Menu for capture settings

1. Powering On. Hold button **8** for three seconds until the display turns on.
2. General Settings. Accessed via **8**. Select the icon of each category and swipe to change the settings, then press the back arrow:
 1. Beep -> Off
 2. Set Time -> Set date and time
 3. Format -> Format the SD card (if needed)
 4. RAW -> On
3. Accessed via **5**, after setting the capture mode to Photo in the top-left of the screen:
 1. Image Size -> 12 MP 4:3
 2. Mode -> Single
 3. Shutter -> As needed
 4. Interval -> Off
 5. Self-Time -> As needed
 6. Zoom -> 1x
 7. Sharpness -> Medium
 8. WB -> Auto
 9. Exposure -> +0.5
 10. Metering -> Center
 11. ISO -> Auto
 12. Color -> Normal
 13. RAW -> On